



File Name: brothers fax 2840 manual.pdf

Size: 1276 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 15 May 2019, 16:45 PM

Rating: 4.6/5 from 705 votes.

Status: AVAILABLE

Last checked: 4 Minutes ago!

In order to read or download brothers fax 2840 manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with brothers fax 2840 manual . To get started finding brothers fax 2840 manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

brothers fax 2840 manual

Retain this User's Guide with your sales receipt as a permanent record of your purchase, in the event of theft, fire or warranty service. Calls must be made from within that country. Register your product By registering your product with Brother International Corporation, you will be recorded as the original owner of the product.If you cannot find the accessory you need and you have a Visa, MasterCard, Discover, or American Express credit card, you can order accessories directly from Brother. You can visit us online for a complete selection of the Brother accessories and supplies that are available for purchase. Note. Which Guide What's in it Where is it Product Safety Guide Read this Guide first. See this Guide for trademarks and legal limitations. You can view the Advanced User's Guide on the Documentation CDROM for FAX2840 and FAX2940 or the Installer CDROM for MFC7240. General Setup Routine maintenance IMPORTANT NOTE Cleaning the machine Memory Storage. Thank you for buying a Brother machine. Italics Italicized style emphasizes an Reading the documentation will help you important point or refers you to make the most of your machine. Advanced User's Guide and Software User's Guide This Basic User's Guide does not contain all the information about the machine such as how to use the advanced features for Fax, Copy, Printer, Scanner and PCFax When you are ready to learn detailed information about these operations, read the. Address Book Shift Let you access speed dial numbers directly. Lets you access One Touch numbers 12 to 22 8 COPY key when held down. Use the manual feed slot to print or copy on labels, envelopes or thicker paper. Note The machine automatically turns on the Manual Feed mode when you put paper in the manual feed slot. Using both hands, put one sheet of paper in the manual feed slot until the front edge of the paper touches the paper feed roller. When you feel the machine pull in the paper, let go.
<http://hrampetraipavlavosstanovlenie.ru/content/images/user/daiwa-tanacom-bull-750-english-manual.xml>

- **brother fax 2840 manual, brother fax 2840 manual pdf, brother intellifax 2840 manual, brother telefax 2840 manual, brother fax 2840 instructions, brother fax 2840 user manual, brother fax machine 2840 manual, brother laser fax 2840 manual, brother fax 2840 service manual, brother printer fax 2840 manual, brothers fax 2840 manual, brother fax 2840 manual, brother fax 2840 manual, brothers fax machine 2840 manual.**

Using both hands, slide the manual feed slot paper guides to the width of the paper that you are going to use. Note Pull down the two green levers, one on the lefthand side and one on the righthand side, as shown in the following illustration. Open the manual feed slot cover. The unscannable and unprintable areas may vary depending on the paper size or settings in the application you are using. Usage Document Top 1 Left 2 Size Bottom 3 Right 4 However, some paper variables may have an DO NOT use paper effect on print quality or handling reliability. This damage may not be wrinkled or an unusual shape.Adjust the paper guides 1 to fit the width of your document. Important To avoid damaging your machine while using the ADF, DO NOT pull on the. When you want to send a fax, or change Press Start. This Time Transmission is set to Off. Choose the correct Receive Mode The correct Receive Mode is determined by the external devices and telephone subscriber services Voice Mail, Distinctive Ring, etc. you will be using on the same line as the Brother machine. You may want to calls. Incoming calls will be handled in the change the Ring Delay before using these following ways modes. The number of rings is set by the Ring Delay setting. The Ring Delay setting sets the number of times the machine rings before it answers in If the call is a fax, then your machine will.

When you see Receiving on the LCD or hear a click on the phone line through the handset you are using, just replace the handset. Note Backup Print FAX2940 only You can download PCFAX Send software from the Brother Solutions Press OK. You can send a file created in any application on your PC as a PCFAX. You can even attach a cover page. If you have Voice Mail on the same telephone line as your Brother machine, Voice Mail and Making a telephone call the Brother machine will conflict with each. Press Menu, 2, 0, 2. After you have set the Distinctive Ring feature to On, your Distinctive Ring number will Miscellaneous 2. <http://sun-tes.ru/files/daiwa-tanacom-ss-80-user-manual.xml>

Distinctive receive faxes automatically. You can connect an external Telephone Connections Answering Device TAD to the same line as your machine. This allows extension telephone your machine time to listen for fax tones. Limit your speaking to 20 seconds. You can connect a separate telephone directly to your machine as shown in the End your 20second message by giving. Make sure you are in FAX mode Press Menu, 2, 1, 4. Press Address Book and enter the threedigit Speed Dial number. See Storing Manual dialing Speed Dial numbers uu page 43. Use the dial pad to enter all the digits of the telephone or fax number. The following steps show the basic copy operation. For details about each option, see For details about changing the following copy Advanced User's Guide on the CDROM. Note For FAX2840 and FAX2940 Click Print to begin printing. You can download the printer driver from the Brother Solutions Center at Printing a document The machine can receive data from your computer and print it. Install the scanner drivers from the Installer CDROM. See Quick Setup Guide Install MFLPro Suite. Note For FAX2940 You can download the scanner driver without the Brother ControlCenter from the Brother Solutions Center at Make sure the machine you want to use is selected from the Model pulldown list. Set the scanning configuration. Click Configuration, and then select Button settings, Scan and File. The machine starts the scanning process. The folder where the scanned data is saved will open automatically. The ControlCenter4 application will open. Make sure the machine you want to use is selected from the Model pulldown list. See Replacing the drum unit uu page 62. If the LCD shows Toner Low, buy a new toner cartridge and have it ready before you The Standard toner cartridge can print get a Replace Toner message. WARNING Take out the drum unit and toner cartridge assembly. Doing so could cause a fire. Instead, use only a dry, lintfree cloth.

See Product Safety Guide To use the product safely. Push down the green lock lever and take. Hold Important the cartridge level with both hands and To avoid print quality problems, DO NOT gently shake it from side to side several touch the shaded parts shown in the times to spread the toner evenly inside illustrations. Put the new toner cartridge firmly into the drum unit until you hear it lock into place. If you put it in properly, the green lock lever will lift automatically. Important Put the toner cartridge in the drum unit immediately after you have removed the protective cover. NOT turn off the machine's power switch or open the front cover until the LCD clears the Please Wait message and returns to Ready mode. Clean the corona wire inside the drum unit by gently sliding the green tab from Slowly take out the drum unit and toner left to right and right to left several times. Close reduce not only the print quality but also the front cover. Warranty coverage does not apply to problems caused by the use of a nonBrother drum unit. If you put the cartridge in properly, the green lock lever will lift automatically. To confirm you are installing a new drum Note unit, press 1. In addition to cleaning the glass strip with When the LCD shows Accepted, close a soft lintfree cloth moistened with water, the front cover. You can correct most problems by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips. Visit us at If this happens, your machine identifies the error or required routine maintenance and shows the appropriate message. The most common error and maintenance messages are shown below. Received fax messages still in memory will be lost when the machine is turned off. See Transferring your faxes or Fax Journal report uu page 74 before disconnecting the machine so you will not lose any important messages.

The machine will stop replace the toner cartridge with a new and printing until you replace the toner unused original Brother toner cartridge. This helps prevent multiple sheets of paper from feeding through the machine at the same time and prevents paper jams. While pressing the green paperguide release lever, slide the paper guides to fit the paper size. Make sure that the guides are firmly in the slots. The jammed paper may be pulled out with the drum unit and toner cartridge assembly, or this may HOT SURFACE release the paper so you can pull it out After you have just used the machine, some from inside of the machine. The jammed paper may be pulled out with the drum unit and toner cartridge assembly, or this may release the paper so you can pull it out from inside of the machine. Push down the green lock lever and take the toner cartridge out of the drum unit. Close the front cover of the machine. If the machine does not start printing automatically, press Start. Note MFC7240 only If you turn off the machine while the LCD shows Jam Inside, the machine will print incomplete data from your computer. Check for a dial tone. Check that the machine is plugged in and switched on. Another device or service at your location may be answering the call before your Brother machine answers. Try changing your resolution to Fine or S.Fine. Make a copy to check your machine's scanner operation. If the copy quality is not good, clean the scanner. See Advanced User's Guide Cleaning the machine. Transmission Verification Report There is probably temporary noise or static on the line. Make sure that COPY is illuminated. See How to copy uu page 45. Vertical black line appears in Black vertical lines on copies are typically caused by dirt or correction fluid on the copies. Scanning difficulties For MFC7240 Difficulties Suggestions. See Advanced User's Guide Cleaning the documents. Your application must be set up How do I print on envelopes.

If you are having difficulty sending or receiving a fax due to possible interference USA Press Menu, 0, 4. on the telephone line, we recommend that Canada Press Menu, 0, 5. If the copy looks good, the problem is probably not the machine. Check the interface cable connections and the following steps first. And then, if you still have a print quality problem, check the chart below and follow the recommendations. Note Using nonBrother supplies may affect the print quality, hardware performance, and machine reliability. Conditions such as high ABCDEFGH temperatures and high humidity can increase the amount of abcdefghijk background shading. F G H A B C D E h i j k a b c d e f g. Envelope creases Note When you have finished printing, open the back cover and reset the two green levers back to their original position. ABCDEFGHIJKLMNOPQRSTUVWXYZ. 0123456789. abcdefghijklmnopqrstuvwxyz. ABCDEFGHIJKLMNOPQRSTUVWXYZ. 0123456789. abcdefghijklmnopqrstuvwxyz. ABCDEFGHIJKLMNOPQRSTUVWXYZ. 0123456789. abcdefghijklmnopqrstuvwxyz. Your machine has been designed to be easy to use. The LCD provides onscreen Choose an option. The dial pad keys have letters printed on them. For additional specifications visit us at for details. Note FAX2940 only You can download the printer driver and the PCFAX driver from the Brother Solutions Center. Easy Receive. 30 Maintenance, routine from extension telephone. 39 replacing. NOTICE The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five. Local Brother companies. Which Guide What's in it Where is it Product Safety Guide Read this Guide first. See this Guide for trademarks and legal limitations. Temporary settings for example, Contrast and Overseas Mode will be lost. Press Menu, 1, 3, 3.

You can choose a ring volume level from a range of settings, from High to Off. Volume 3. Speaker While in FAX mode press. Note The LCD shows the setting are choosing. When you press d or c on the The new setting will remain until you control panel to adjust the volume, the change it again. LCD shows the setting you are choosing. It will You can save toner using this feature. When set itself forward one hour in the Spring, and you set Toner Save to On, print appears back one hour in the

Fall. The machine can store received faxes in the memory if you choose Continue mode when Press Menu, 1, 5. the LCD shows Replace Toner. You can set how much time the machine takes after the last Copy or Scan operation to return to FAX mode. Press a or b to choose Set Password. Make a careful note of your password. If you Press OK. Reenter the Security 2. Setting Lock correct password. Enter a fourdigit number for the Turning Setting Lock on password using numbers 09. It automatically chooses the suitable contrast Sending faxes using multiple for your document. Resolution can be changed for the next fax or for all faxes. Sending a fax manually To change the Fax Resolution setting for the next fax Manual transmission Manual transmission lets you hear the. This feature will not work unless you have already programmed your Station ID. See Make sure you are in FAX mode Quick Setup Guide Set your Station ID. You can automatically send a cover page Press Menu, 2, 2, 8. Polling lets you set up your machine so other people can receive faxes from you, but they pay for the call. This is a safety feature in case if there is a power You can use only one Remote Fax Option at failure before the fax is forwarded or a. You programmed. This activates your cell phone can retrieve stored fax messages from a fax or pager so you will know that you have a fax machine at another location using the remote.

Important If received faxes are left in your machine's If you choose Backup Print On, the memory when you change to another machine will also print the fax at your Remote Fax Option, the LCD will ask you the machine so you will have a copy. When you call the machine and enter your Remote Access Code 3 digits followed by 1, the system will give two short beeps and you must enter a remote command. It also lets you call somebody Menu, 2, 5, 1, you can still print a fax from else's fax machine and receive a fax from it, the memory when you are at your machine. To cancel all sequential polling receive jobs, press Menu, 2, 7. See Checking and canceling waiting jobs uu page 18. Call your telephone Tone or Pulse Canada only company for details. This service shows the telephone number, or name if it is available, If you have a Pulse dialing service, but need of your caller as the line rings. You can view Roll over telephone lines or print this list. When the thirtyfirst call comes in to the machine, it replaces A roll over telephone system is a group of two information about the first call. Plug the other end into jack. This feature may be message to many fax numbers you can set useful if you need to dial an access code for up a Group. The and manually. You can use different combinations of settings. The machine returns to its default settings one minute after copying, unless you have set the Mode Timer to 30 seconds or less. Use the Options key to quickly set the following copy settings only for the next copy. Pages will be settings. The default setting is Auto. When you Turn off the machine's power switch. Turn off the machine's power switch. Unplug the telephone line cord first, disconnect all cables, and then unplug the power cord from the AC power outlet. Slowly take out the drum unit and toner cartridge assembly. Close the electrodes shown in the illustration.

totaleclipsenv.com/wp-content/plugins/formcraft/file-upload/server/content/files/16274a91426b29---brother-fax-575-user-manual.pdf

Using both hands, put one piece of A4 or Letter size paper in the manual feed slot until the top edge of the paper touches the paper feed roller. The machine will start the Drum Cleaning process. Put the print sample in front of the drum unit, and find the exact position of the poor print. When you have found the mark on the drum that matches the print sample, wipe the surface of the OPC drum with a dry cotton swab until the dust or glue on. If you put the cartridge in properly, the green lock lever will lift automatically. Close the front cover. Tightly wring out a lintfree cloth soaked in lukewarm water, and then wipe the separator pad 1 of the paper tray with it to remove dust. Put the drum unit and toner cartridge assembly back into the machine. Put the elastic band over the handle of the drum unit, as shown in the illustration. Availability of these features depends on the model you purchased. ADF automatic document feeder CNG tones The document can be placed in the ADF The special tones beeps sent by fax and scanned one page at a time machines during automatic

transmission automatically. Do not use this mode if you are time it is sending a fax or receiving or using a telephone answering device printing an incoming fax. Transmission The process of sending faxes over the telephone lines from your machine to the receiving fax machine. Transmission Verification Report A report for each transmission, that shows its date, time and number. Deep Sleep mode.5 Delayed batch transmission.18 Dialing access codes and credit card numbers 34 Broadcasting.16 dial prefix.7 canceling.17 Groups broadcasting.16 setting up Groups for.34 restricting dialing. Security restricting dialing.13 Setting Lock.11. Local Brother companies. Our payment security system encrypts your information during transmission. We don't share your credit card details with thirdparty sellers, and we don't sell your information to others. If this is a gift, consider shipping to a different address.

If this is a gift, consider shipping to a different address. Please try again.Please try again.Built in HiSpeed USB 2.0 interface to connect to your computer for up to 21ppm laser printing.Show details. Sold by bzsmile and ships from Amazon Fulfillment. In order to navigate out of this carousel please use your heading shortcut key to navigate to the next or previous heading. Please try your search again later.Its compact in size, energyefficient and offers convenient, highquality copying. You can use it for both fax and voice calls on the same telephone line and you can even connect an external answering machine.For faxing and copying multiple pages, up to legal size.It features a 33.6K bps modem, 16MB memory and a 20page capacity auto document feeder for faxing and copying multiple pages. This compact fax offers up to 272 broadcasting locations, 200 speed dial locations, 22 onetouch keys and can even receive fax and voice calls on the same telephone line. It has a generous paper tray capacity of 250 sheets and a USB interface for future printing capability. Also, an optional high capacity replacement toner cartridge is available to help lower your cost per page.Also exclude for P.O. boxes. Amazon calculates a product's star ratings based on a machine learned model instead of a raw data average. The model takes into account factors including the age of a rating, whether the ratings are from verified purchasers, and factors that establish reviewer trustworthiness. Please try again later. Ubaldo L. 5.0 out of 5 stars Pasting together several comments that appeared online, I learned the following. 1 The machine will spontaneously go into regular sleep mode when not in use. This saves energy. In regular sleep mode the machine will wake up and received faxes normally. This mode saves more power than regular sleep mode.

However, the machine in deep sleep mode will only wake up and become able to receive faxes if a one physically touches a key, b one lifts the handset, or c if it received data from a computer or network. This will only happen if the fax machine is used as a printer, attached to a computer or a network. So, if one wants to use it as a standalone fax machine or one wants to receive faxes at all times, the deep sleep mode needs to be turned off. This is not an intuitive project. To turn off the Deep Sleep mode you need to do the following Press Menu. With the up and down arrows select 1. General Setup, press OK. Select 4. Ecology, press OK. Select 2. Sleep Time, press OK. The Deep Sleep menu will appear. You can then choose yes or no with the up and down arrows. As much as the deep sleep mode is ecologically friendly, it remains incomprehensible why Brother made the access to controlling the Deep Sleep mode so hidden and arcane. The machine makes excellent copies and is a great printer. As to durability and cost of maintenance, remains to be seen.Once I unboxed the unit, I used masking tape to cover the black areas and any open electronics. Using a simple flat black can of spray paint, I was able to make it all black. Nobody can tell it was painted even when I point it out to them. First problem fixed. I have had the unit for about 7 months and it has performed flawlessly. It even uses the same toner as a wireless Brother printer I have which is a bonus as well. This past week of course, I encountered the DEEP SLEEP curse that so many people speak of. The machine will do half a ring and act weird, but will not receive faxes. After some research and playing around, there is a solution, even though Brother has decided to hide the feature. You ARE able to disable DEEP SLEEP. Go to General Settings, Ecology, Sleep Mode. When it asks you to change the time before sleep, simultaneously press the START and DOWN ARROW

buttons.

You will now get the hidden option to Disable DEEP SLEEP mode. Disable it and enjoy your fax for many years to come. Very disappointing. Second there is no way to copy anything other than single pages, e.g., copies of book pages, as you cannot lift the top exposing the palette. This machine has caused complete stress and it certainly has not made our everyday office chores any easier. Because it continually malfunctions, I drove into town yesterday to another business in order to use their fax machine. We have tolerated this nonsense since we purchased it should have returned it within the time stated. Now apparently it is too late and we lost our option to return this equipment. Lastly, the toner cartridges are tremendously expensive and when it needs to be NEAR replacement, it will NOT allow you to fax!!!! If I could rate in the minus numbers I would!!!! Likewise its the 2nd time that Im getting paper size mismatch errors. Called brother and they are literally impossible to deal with. Buyer beware, its a cheap unit with absolutely no support. If you need brother for anything they hassle you to death, and by the time anything gets decided they just cancel the ticket out of the system. And so far this one is working really good, the print quality is really good, much better than my previous fax machine and it prints fairly fast, 2.5 seconds per page. It was fairly easy to hook up and only took a few minutes for me to have it up and running and this was with a few telephone interruptions Also while it does come with everything that you need to get started youre probably going to want to order an extra toner cartridge right away, the one that comes with it is only a starter and if you receive a lot of faxes you might just find yourself without any toner. Ill update this review after Ive had more time to use the printer. Paper jams, memory issues, feeder issues, scanning issues, trust issues!!! For 7 years I have suffered.

So I decided to take the plunge on new fax machine. Honestly 99.9% of the faxes I receive are junk mail but once a week I get something that is actually business related and for that reason I have to have a functioning fax machine. This thing is big, bulky and looks like it should do a lot more than it does but it operates with the simple efficiency of a peanut butter and jelly sandwich. If you need a new fax machine and dont want one of those all in one jobs, this is your guy. So why is it being sold in Canada, with written in fine print in the user manual that that feature not available If I new that I could have purchased an HP all in one and have PCfax capability instead of purchasing a Brother FAX2840 machine deceptively showing it to be a dedicated fax when it is a printer with fax capabilities, to allow brother to dump them in Canada Sorry, we failed to record your vote. Please try again Sorry, we failed to record your vote. Please try again Works really good and very happy with it Sorry, we failed to record your vote. Please try again Good product. Sorry, we failed to record your vote. Please try again Huge upgrade from our previous machine. Really like this product. Sorry, we failed to record your vote. Please try again Small and compact. No issues with it whatsoever. Very satisfied. Sorry, we failed to record your vote. Please try again In order to navigate out of this carousel please use your heading shortcut key to navigate to the next or previous heading. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Brother Fax 2840 User Guide. To get started finding Brother Fax 2840 User Guide, you are right to find our website which has a comprehensive collection of manuals listed. Our library is the biggest of these that have literally hundreds of thousands of different products represented.

I get my most wanted eBook Many thanks If there is a survey it only takes 5 minutes, try any survey which works for you. Your Brother product is engineered and manufactured to the highest standards to deliver reliable performance, day in and day out. To view the Quick Setup Guide in other languages, please visit. These documentations are only intended for qualified technicians who are aware of the respective safety regulations. Products names, logos, brands and other trademarks are the property of their respective trademark holders in the USA and other countries. Using the online preview, you can quickly view the contents and go to the page where you will find the solution to your problem with Brother FAX2840. To start viewing the user manual Brother FAX2840 on full

screen, use the button Fullscreen. However, if you do not want to take up too much of your disk space, you can always download it in the future from ManualsBase. The option to print the manual has also been provided, and you can use it by clicking the link above Print the manual. You do not have to print the entire manual Brother FAX2840 but the selected pages only. paper. If you want to quickly view the content of pages found on the following pages of the manual, you can use them. For FAX users; This documentation is for both MFC and FAX models. Where it says MFC in this User's Guide, please read MFCxxxx as FAXxxxx. Compilation and publication notice Under the supervision of Brother Industries, Ltd., this manual has been compiled and published, covering the latest product's descriptions and specifications. ThUsing the Brother printer driver 2 A printer driver is software that translates data from the format used by a PC into the format needed by a particular printer, using a printer command language or page description language. The printer drivers are available from the download page for your moThe paper tray can feed many types of paper and envelopes.

For information about the Paper Tray and 2 Recommended paper, see Basic User's Guide. a From your application, choose the Print command.If the paper is thin, it may wrinkle. If paper is curled, turn over the stack, straighten it and then put it back in the paper tray or manual feed slot. If the paper is not feeding properly, it may be curled. Remove the paper, straighten it and turn over the stack. When you use the manual duplex function, it is possible that Fax sending will not be stopped during the computer printing. However, when 2 the machine is copying or receiving a fax on paper, it pauses the computer printing operation, and then continues printing when copying or fax receiving has finished. Note Even if Toner Low or Toner Ended is displayed on the LCD, Toner Save Mode Administrator Density Adjustment. Improve Print Output. Skip Blank Page Print Profiles The following pages To return to the default settings, click Default, then OK. Paper Size 2 From the dropdown If the Collate check box is not selected, then each page will be printed for all the copies selected before the next page of the document is printed. Media Type 2 You can use the following types of mediaIf the toner is not fixed to the envelope correctly when Envelopes has been selected, choose Env. Thick. If the envelope is crumpled when Envelopes has been selected, choose Env. Thin. Resolution 2 You can choose the resolutScaling 1 Reverse Print 2 Use Watermark 3 HeaderFooter Print 4. Toner Save Mode 5. Administrator 6 Other Print Options 7 Scaling 2 You can change the print image scaling. All manuals on ManualsCat.com can be viewed completely free of charge. By using the Select a language button, you can choose the language of the manual you want to view. Perhaps the users of ManualsCat.com can help you answer your question. By filling in the form below, your question will appear below the manual of the Brother FAX2840.